



PRODUCT NUMBER: 1001558
MX/PF F 950 HALF-MASK

Overview

Reference Number
 1001558

Product Type
 Respiratory Protection

Range
 Reusable APR

Brand
 Sperian

Brand formerly known as
 WILLSON

Industry

- Administration

Product Use
 The Half mask SPERIAN MXPF is designed to work when external concentration allows it .The type of protection depends on the cartridges connected, gases , particles or combined.

The threshold is depending on a theoretical calculation , based on the facial leakage and the efficiency of the adapted canister . The APF is evaluated from 12 to 50 . It allow the use of the Half mask from an external concentration between 12 time to 50 time the Occupational Exposure Limit .

The half mask SPERIAN MX PF can be used only with certified T SERIES cartridges (following the standard EN 141 , EN 143)

The oxygen concentration has to be superior to 17 %

MX/PF 950 half face mask is known worldwide for his exceptional comfort and is specially recommended for long term use.

Features & Benefits

Feature

Easy assembly

Benefit

Easy and quick care

Feature

Silicone facepiece

Benefit

- Comfortable - Long service life - Economical - Easy decontamination

Feature

Triple flange seal

Benefit

Protection factor (Fit Test)

Feature

Wide, horizontal skin contact with pleated design

Benefit

- Good fit across a wide variety of facial geometries - Safe for communication

Feature

Four-point yoke

Benefit

- Safe - Comfortable for long period

Feature

Wide flange seal

Benefit

Comfortable

Feature

Mouth-level exhalation valve position

Benefit

- Comfortable - Communication +++

Technical Description

Mask

Material

-1 size fits all - 2 fastening point - a system to hold the mask place on neck position - The big inspiration port allows low respiratory resistance and breathing comfort. Made of silicone high quality

Compressed Airline Infiltration System

Canister Type

Filters T series

Canister Information

- Cartridges are placed on the back part of the jaws, for a perfect field of vision - the Cartridges are balanced, so far the mask gives an impression of lightness on the face - Goggles and personal spectacle may be used, thanks to the special shape of mask. - Internal 2 limb system to provide an excellent fit associated to the jaw recoreving system -Klick fit system on the cartridges

Certifications

 E.C. Declaration of Conformity

EC Category PPE

3

EC Certificate Number

0

EC Attestation

 EC Attestation

EC Attestation Number

385

Photos & Images

 PIC SKU - Pictures

<http://www.honeywellsafety.com/assets/0/324/500/51887/12e836f63b68427bb840fef17d2e3610.jpg>

Additional Information

User Manual

Halfmask

Parts & Accessories


Spare Parts

Marking Réference Description

- 1: 10 015 75 Harness
- 2: 10 015 71 Exhalation valve
- 3: 10 015 70 Inhalation valve
- 4: 10 015 57 Adaptater
- 5: 10 016 18 Filter connector

Spare Parts File

Spare Parts File

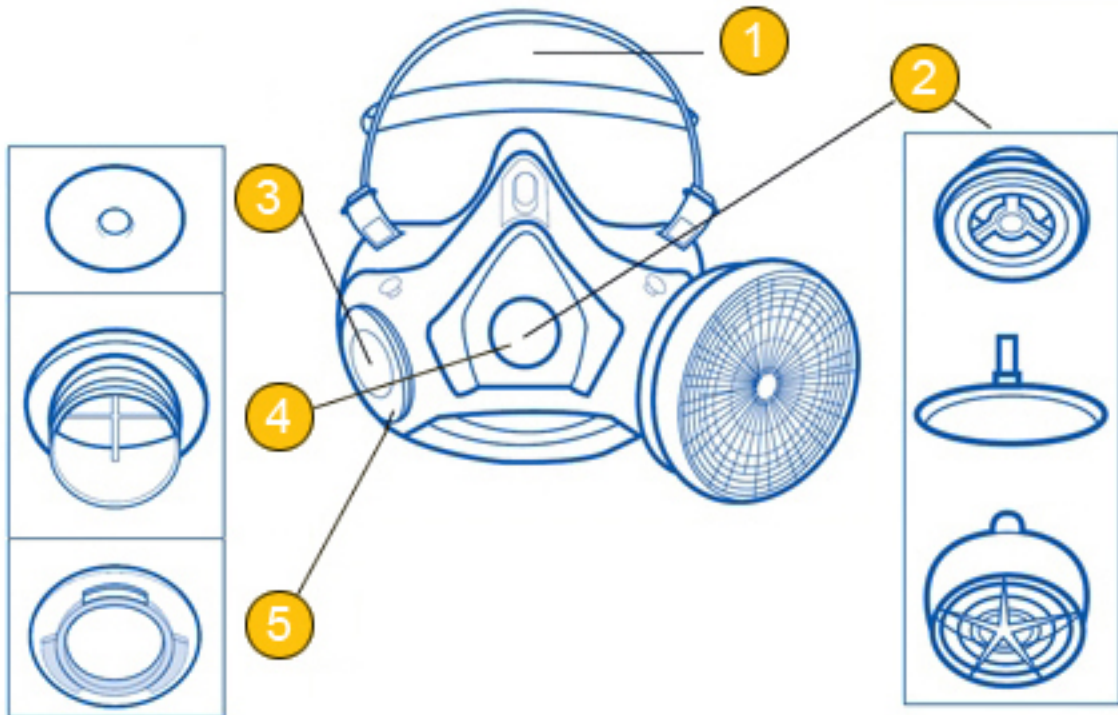

1

2

3

4

5

